









RECOMMENDED PRODUCTS AND DRINKS UNION BEVERAGE

	NATURE	APPLICATION	PLACE OF APPLICATION
CPQ topfoam plus	ALKALINE (Clearing organic debris)	Projection of foam	Simultaneous clearing and disinfecting surfaces with foam debris syrups, etc.
CPQ topfoam acid	ACID (Traces of lime)	Projection of foam	Walls – floors –stainless steel tanks and pipes.
CPQ ideal 500/r	ACID (Lime descaler)	Spray or flood	Deposits, structures, machinery and stainless steel pipes.
CPQ cintex fv	CHAIN LUBE (Lubricant slightly alkaline)	Manual or automatic	Lubrication of conveyor belts bottles or cans to improve their glide.
CPQ adiplus 100	ADDITIVE (Slightly acidic liquid additive)	Manual or automatic	Dosage in master bath alkaline bottle washer.
CPQ adiplus p	ADDITIVE (Powder additive)	Manual	Dosage in master bath alkaline bottle washer.
CPQ antiespumante m	LIQUID ANTIFOAMS	Manual or automatic injection	Bath washing machines, peelers, etc.
CPQ ta-4	ADDITIVE (Additive sequestrant)	Injection on line	Boilers, autoclaves baths, washing machines.
CPQ topfoam mv	ALKALINE (Liquid detergent)	Manual	Clean vending circuit.




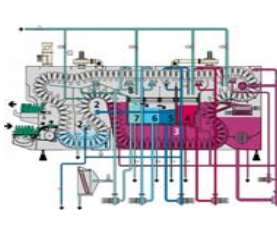





APPLICATION OF PRODUCTS IN THE SOFT DRINKS INDUSTRY

CLEANING:	APPLICATION	SECURITY	FREQUENCY	DOSE AND TEMPERATURE. °C	MINIMUM CONTACT TIME, minutes.
PACKAGING AND PRODUCTION ROOM (CPQ topfoam plus)		 	DAILY	4%	20 minutes
				Room temperature	Rinse
PACKAGING AND PRODUCTION ROOM (CPQ topfoam acid)		 	MONDAY, WEDNESDAY,FRIDAY	4%	20 minutes
				Room temperature	Rinse

Comment: The application of **CPQ topfoam** product, will be uniformly and always from top to bottom, left to right in the case of floors not to throw the foam in the same place and overloading, thus preventing it from sliding too fast and therefore not achieve adequate cleaning.



APPLICATION OF PRODUCTS IN THE SOFT DRINKS INDUSTRY

APPLICATION IN:	APPLICATION	SECURITY	FREQUENCY	DOSE	APPLICATION TIME
CONVEYOR TABLES (CPQ cintex fv)			DAILY	4%	30 seconds / start 30 seconds / stop
BOTTLE WASHER (CPQ adiplus 100) (CPQ adiplus p)		 	DAILY	4%	Dosage on caustic soda each new contribution, the bathroom washing machine
CIRCUITS AND DEPOSITS (CPQ adiplus 100) (CPQ ideal 500/r)		 	DAILY	4%	20 minutes
				Room temperature	Rinse